

UK DESCRIPTION AND MAINTENANCE OF THE SKATE

ADVICE FOR OPTIMAL POSITION-ADJUSTMENT

Since the Dance frame is a product constructed exclusively for professional use, it guarantees the best performance only when correctly adjusted. An optimal position is achieved by carefully choosing the most appropriate suspensions in relation to the type of skating and the weight of the athlete.



CHART OF THE SUSPENSION HARDNESSES

Urethane suspension hardness

green	Extra soft - up to 35 kg
grey	Soft - up to 45 kg
clear blue	Medium - up to 55 kg
clear	Medium/hard - up to 70 kg
clear yellow	Hard - >70 kg

Dance comes with a complete spare set of mini stopper.

CLICK ACTION ADJUSTMENT

Turn the action adjustment nut with the 17 mm wrench in the clockwise direction to make the action more rigid, or in the counter-clockwise direction to make it softer.

It is important to check that the pivot is well inserted into the pivot bush while exerting slight pressure.


Adjustment Nut locking screw is only a safe screw, remove it only when you change the suspensions.

COMPONENTS

SODAN	Dance Plate
SFN	Nylon pivot bush
PSF3/04	Action bolt Click Action System mod. 04
PISAC	Chromed Upper cup
SSES	Upper suspension in Elastomer
CRARING	Aluminum Truck Dance
PUAF 2	Aluminium pivot 2
DDPU	Pivot lock nut
SSEI	Lower suspension in Elastomer click action
PIIA8T	Lower cup for Click Action
DDRPSBT	Action adjustment nut for Click Action
VTBDIN	Adjustment nut locking screw inox
STD192	Set of Spacers
STDDRUG	Set of self-locking nuts
STMSS	Fixing kit
KITCHPRO	Set of super professional wrenches
STCFTF	Set mini stopper

PIVOT ADJUSTMENT

Loosen the pivot locking screw with a 13 mm wrench. Screw the pivot on or off with a 6 mm wrench until this is well inserted into the pivot bush while exerting slight pressure. Retighten the pivot locking screw.

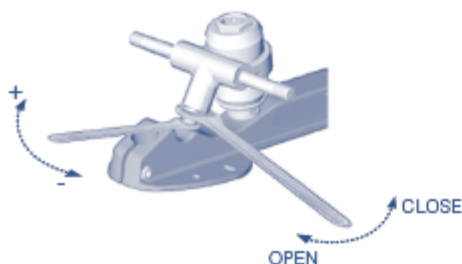

CONTROL AND MAINTENANCE

We recommend that you check the status of the various components every time this product is used. In particular, carefully check the following:

- that the plate is well fastened to the boot;
- that the bolts are well fastened to the plate of the skate;
- the wear and tear status of the suspensions;
- that the pivot is well inserted into the pivot bush with slight pressure;
- the wear and tear status of the wheels and the self-locking nuts for fastening the wheels;
- the optimal gliding of the bearings;